



V-BELT INSTALLATION INSTRUCTIONS



V-Belt Alignment

Before installing the bushings, refer to EPT Form No. F20-23 for QD® instructions and Form No. 4013 for Split Taper instructions. After installing the bushings in the sheaves and the resulting assemblies onto the shafts, use a straight edge, piano wire or string placed on the outside face of both sheaves to adjust parallel offset and angular alignments. The straight edge, piano wire or string should be close to the shafts and contact each sheave in two places. The objective is to have the shafts parallel and the center lines of the two sheaves in line. See Figure 1 below.



⚠ WARNING

Disconnect power before installation and maintenance. Failure to do so can result in severe injury or death.

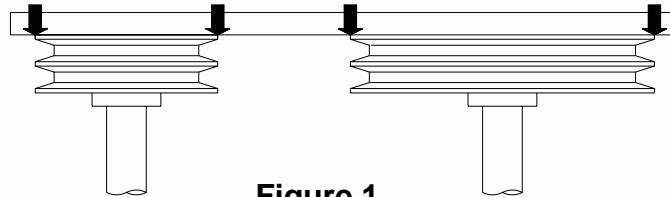


Figure 1

Belt drives should be aligned as perfect as possible to maximize drive life. The practical maximum misalignment is stated as the angle at which the belt enters the sheave. This angle is a result of both angular and parallel offset misalignment, and is 1/2 degree.

V-Belt Sheave Installation

- Step 1: Loosen moveable base bolts (or motor base bolts) and move sheaves close to facilitate installation of belt. See Table 1 for minimum installation allowance.
 If the design has fixed, non-moveable centers (not a recommended design) do the following:
 A. Mount one sheave onto the shaft loosely and put the belt on it.
 B. Put the other sheave into the belt loop and slip it onto the other shaft (bushing loosely installed).
 C. Align the drive and tighten the bushings.
- Step 2: Move all the slack in multiple belt drives to one side, then remove the slack (increase centers). Then rotate sheaves several revolutions by hand to equalize belt tensions.
- Step 3: Tension belts as outlined on reverse side of this page.
- Note: If BROWNING® Tension Checker is used, only 35 lbs maximum force (F) can be obtained. If higher forces are required, use other means such as dead weights or hydraulic pressure to apply a known force.

⚠ CAUTION

Do not pry or otherwise force belts onto sheave. Doing so can result in permanent damage to the belt.

TABLE 1 CENTER DISTANCE ALLOWANCE

Belt No.	Allowance for Installation				Allowance for Initial Tensioning and Subsequent Take-Up
	4L, A	5L, B	C	D	All Sections
26 - 35	.8	1.0	—	—	1.0
38 - 55	.8	1.0	1.5	—	1.5
60 - 85	.8	1.3	1.5	—	2.0
90 - 112	1.0	1.3	1.5	—	2.5
120 - 144	1.0	1.3	1.5	2.0	3.0
158 - 180	—	1.3	2.0	2.0	3.5
195 - 210	—	1.5	2.0	2.0	4.0
240	—	1.5	2.0	2.5	4.5
220 - 300	—	1.5	2.0	2.5	5.0
330 - 390	—	—	2.0	2.5	6.0
420 and over	—	—	2.3	3.0	1 1/2% of Belt Length
	3V	5V	8V		All Sections
250 - 475	.5	—	—	—	1.0
500 - 710	.8	1.0	—	—	1.2
750 - 1060	.8	1.0	1.5	—	1.5
1120 - 1250	.8	1.0	1.5	—	1.8
1320 - 1700	.8	1.0	1.5	—	2.2
1800 - 2000	—	1.0	1.8	—	2.5
2120 - 2240	—	1.2	1.8	—	2.8
2360	—	1.2	1.8	—	3.0
2500 - 2650	—	1.2	1.8	—	3.2
2800 - 3000	—	1.2	1.8	—	3.5
3150	—	1.2	1.8	—	4.0
3350 - 3550	—	1.5	2.0	—	4.0
3750	—	—	2.0	—	4.5
4000 - 5000	—	—	2.0	—	5.5
5600	—	—	2.0	—	6.0

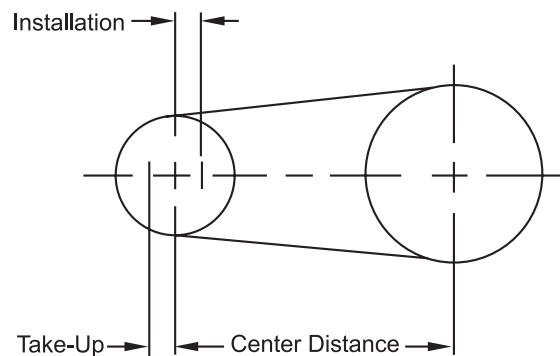


Figure 2

V-BELT SHEAVE INSTALLATION INSTRUCTIONS

Tensioning V-Belts

Calculate or measure the belt span length as shown in Figure 3. Calculate the required deflection by multiplying this number by 1/64. For example, if the belt span is 32 inches, $32 \times 1/64 = 1/2$ inch deflection. Increase the belt tension by increasing the center distance (or adjusting the idler, if present). Apply the force listed in Table 2 evenly across the width of the belt at the center of the belt span. A strip of keystone or similar material may be used to help distribute the force evenly across the belt width. Drives with shock loading or other unusual conditions may require increased tension. Always check to be sure bearings can handle the loads. Excessively high or low tensions will affect belt life. Recheck belt tensions after 24 hours of operation.

TABLE 2
SHEAVE DIAM - INCHES
DEFLECTION FORCE - LBS.

Belt Cross Section	Smallest Sheave Diameter Range	RPM Range	Belt Deflection Force			
			Super Gripbelts and Unnotched Gripbands		Gripnotch Belts and Notched Gripbands	
			Used Belt	New Belt	Used Belt	New Belt
A,AX	3.0 - 3.6	1000-2500	3.7	5.5	4.1	6.1
		2501-4000	2.8	4.2	3.4	5.0
	3.8 - 4.8	1000-2500	4.5	6.8	5.0	7.4
		2501-4000	3.8	5.7	4.3	6.4
	5.0 - 7.0	1000-2500	5.4	8.0	5.7	8.4
		2501-4000	4.7	7.0	5.1	7.6
B,BX	3.4 - 4.2	860-2500	-	-	4.9	7.2
		2501-4000	-	-	4.2	6.2
	4.4 - 5.6	860-2500	5.3	7.9	7.1	10.5
		2501-4000	4.5	6.7	6.1	9.1
	5.8 - 8.6	860-2500	6.3	9.4	8.5	12.6
		2501-4000	6.0	8.9	7.3	10.9
C,CX	7.0 - 9.0	500-1740	11.5	17.0	14.7	21.8
		1741-3000	9.4	13.8	11.9	17.5
	9.5 - 16.0	500-1740	14.1	21.0	15.9	23.5
1741-3000		12.5	18.5	14.6	21.6	
D	12.0 - 16.0	200-850	24.9	37.0	-	-
		851-1500	21.2	31.3	-	-
	18.0 - 20.0	200-850	30.4	45.2	-	-
851-1500		25.6	38.0	-	-	
3V,3VX	2.2 - 2.4	1000-2500	-	-	3.3	4.9
		2501-4000	-	-	2.9	4.3
	2.65 - 3.65	1000-2500	3.6	5.1	4.2	6.2
2501-4000		3.0	4.4	3.8	5.6	
	4.12 - 6.90	1000-2500	4.9	7.3	5.3	7.9
		2501-4000	4.4	6.6	4.9	7.3
5V,5VX	4.4 - 6.7	500-1740	-	-	10.2	15.2
		1750-3000	-	-	8.8	13.2
		3001-4000	-	-	5.6	8.5
	7.1 - 10.9	500-1740	12.7	18.9	14.8	22.1
		1741-3000	11.2	16.7	13.7	20.1
	11.8 - 16.0	500-1740	15.5	23.4	17.1	25.5
		1741-3000	14.6	21.8	16.8	25.0
8V	12.5 - 17.0	200-850	33.0	49.3	-	-
		851-1500	26.8	39.9	-	-
	18.0 - 22.4	200-850	39.6	59.2	-	-
851-1500		35.3	52.7	-	-	


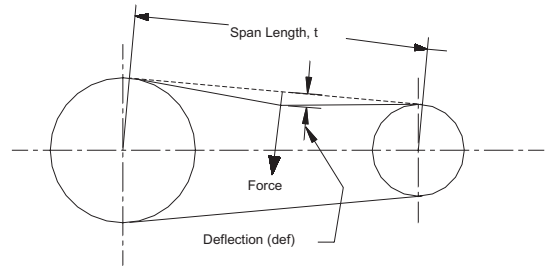



Figure 3



CAUTION

To avoid damage, supporting structure including shafts and bearings must be designed to handle transmitted loads and belt tension(s).

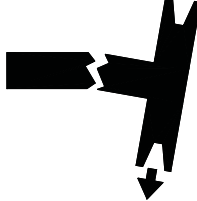

WARNING

Operating drives without guards in place can result in severe injury or death.

Belt Cross Section	Smallest Sheave Diameter Range	Belt Deflection Force	
		Used Belt	New Belt
3L	1.25 - 1.75	3/8	5/8
	2.00 - 2.25	3/4	1 1/4
	2.50 - 3.00	1	1 1/2
4L	2.10 - 2.80	5/8	1
	3.00 - 3.50	1 5/8	2 1/2
	3.70 - 5.00	2	3
5L	3.00 - 4.20	1 1/2	2 5/8
	4.50 - 5.20	2 1/2	3 1/2

Note: For gripbands (multiple or banded belts), the belt deflection force in the above tables must be multiplied by the number of ribs in the gripband. Lay a narrow steel bar such as keystone across the gripband belt and apply the belt deflection force to the bar such that all the individual ribs are deflected evenly.

General Notes

Do not install new belts in worn sheave grooves. Such sheaves should be replaced with new ones to insure a proper fit of the belts in the grooves.

Keep belts clean. Do not use belt dressing.

When replacing belts on a drive, be sure to replace the entire set with a new set of matched belts. Failure to do this may result in premature breakage of new (and probably shorter) belts.

Keep extra belts stored in a cool, dark, dry place.

Have questions? Contact Technical Services at 1-800-626-2093.

